

230VAC



This line goes to water distribution inside house




OHT TANK

Tank Delivery Line

Tank water in

Adjustable valve (open Half)

SALT

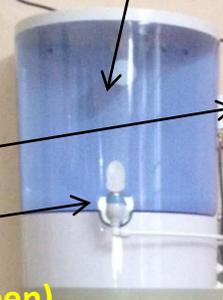

TAP (always open)

Adjustable Timer To set the recharge time frequency

Motor Outlet line

Salt Water in

Motor Delivery line



In OUT



Adjustable valve (open Half)

Waste Water OUT

Solenoid

INPUT SECTION

OUTPUT SECTION

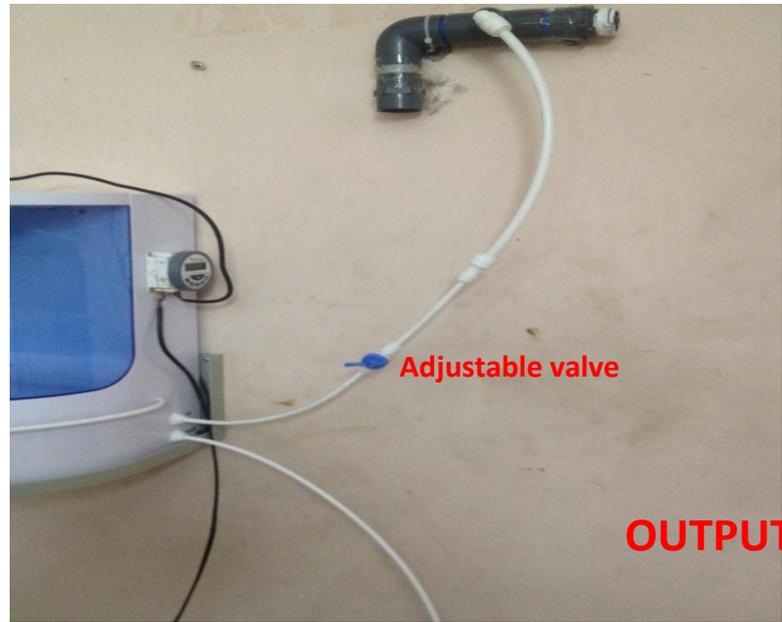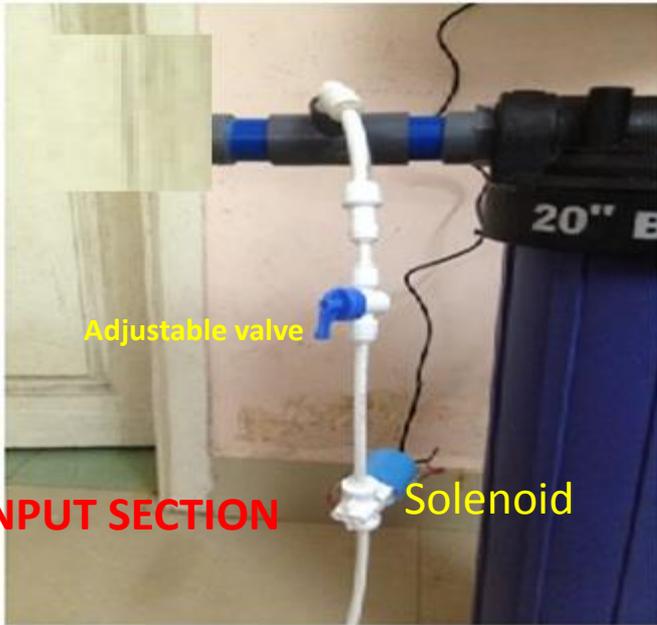

Tank water IN